




OZDT

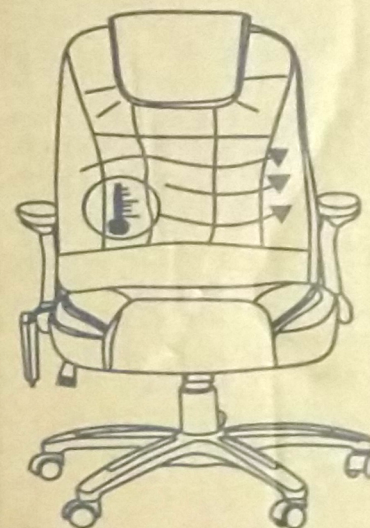

8 Point Massage Office Computer Chair

(按摩办公椅)

QTY: 1PCS/185PCS

CTN: 106 / 185

FRAGILE

Assembly Instructions

Step 1.


Once you have opened the packaging check all of the parts and tools supplied and take a few minutes to familiarise yourself with the assembly instructions provided.

(1)x1 	(2)x1 	(3)x1(L) (R) 	(4)x1 	(5)x1 	(6)x1 
(7)x1 	(8)x5 	(9)x1 	(10)x4  M6x25mm	(11)x2  M8x35mm	(12)x1  M8x35mm
(13)x6  M6x20mm	(14)x1  M8x45mm	(15)x4  M6	(16)x 2 	(17)x1 	(18)x1  (UK) (SAA) (DE)

*Part (17 remote with host) and (18 AC adapter)—(Optional for massage model)



Step 2.

Turn the base of the chair over and insert the chair wheels into the sockets. This may require a little force for the wheels to slot neatly into the sockets.

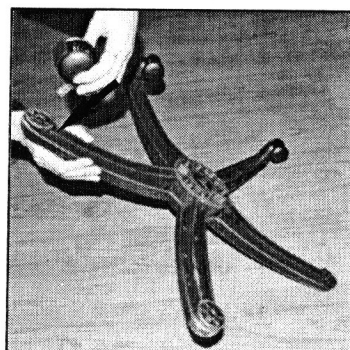


Step 3.

Turn the base of the chair the right way up making sure all chair wheels are correctly inserted. Insert the gas lift piston into the base and place the protective plastic tube over the top.

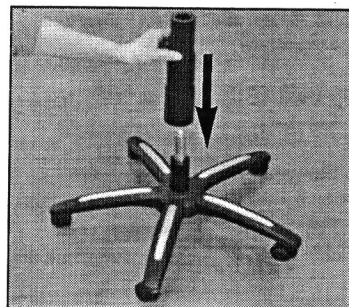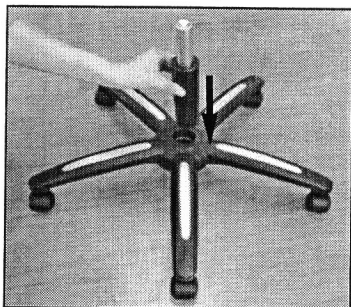


Step 4.

Attach the armrests onto the seat using the appropriate screws (4 x Screw No. 10). For massage function chair, right armrest comes with a fitted pocket holding remote controller.

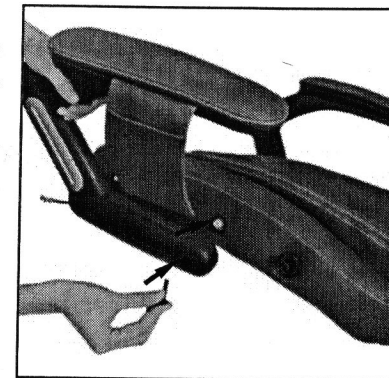


Step 5.

Next slide the chair back into the fittings on the armrests and fasten it with the appropriate screws (2 x Screw No. 11).

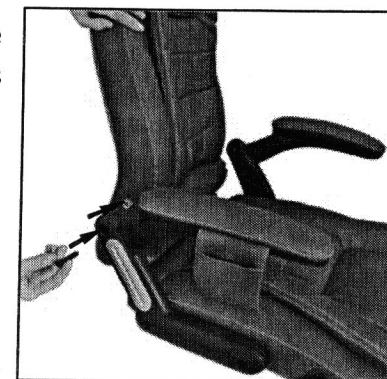


Step 6.

Turn the chair upside down and fit the reclining mechanism. To fit the reclining mechanism first attach the silver fixing to the bottom of the seat using two screws (2 x Screw No. 13)

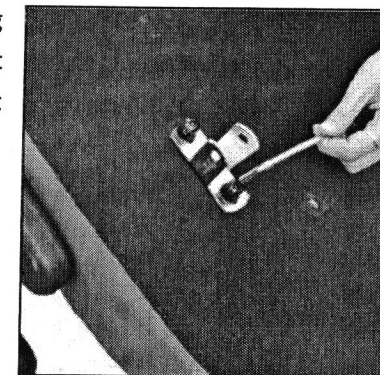



Step 7

To fit the piston first attach it to the back of the seat by inserting the end of the piston in between the fixing on the chair and fix it in place by inserting a screw through the chair fixing and the piston and tighten in place with the correct nut (1 x Screw and nut No. 12).

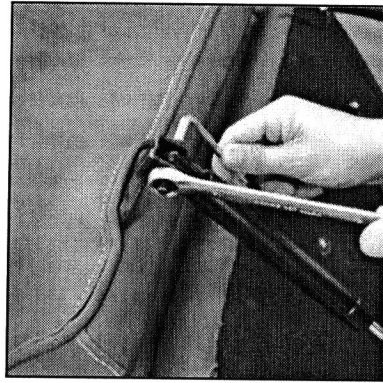


Step 8

Finish attaching the reclining mechanism by aligning the end of the piston with the fixture we added in step 7 and putting a bolt (1 x Screw and nut No.14) through both. Please note you may need to press down on the lever of the mechanism to extend it. To ensure the reclining mechanism works feed the tension cable through the hoop of the piston and fix the ball on the end of the cable into the piston lever and tighten with the attached nuts.

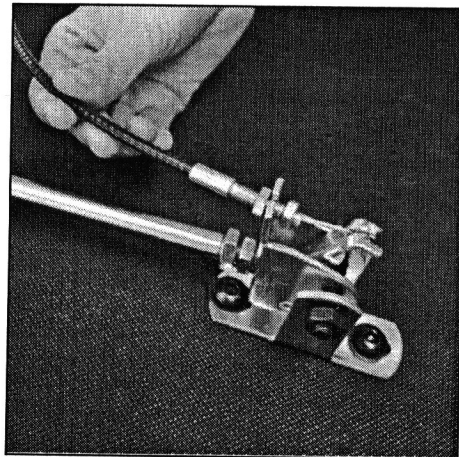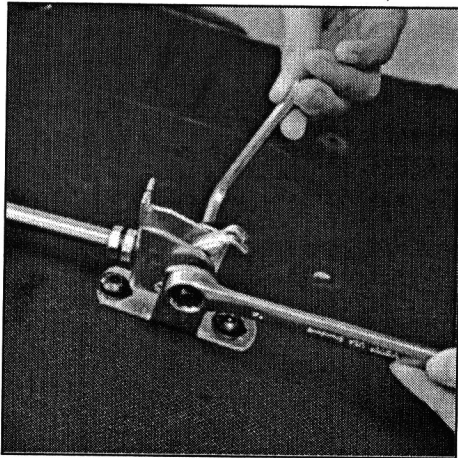


Step 9.

Attach the base mechanism by simply screwing in the appropriate screw and washers (4 x Screw No. 13 and 4 x Washers No. 15).

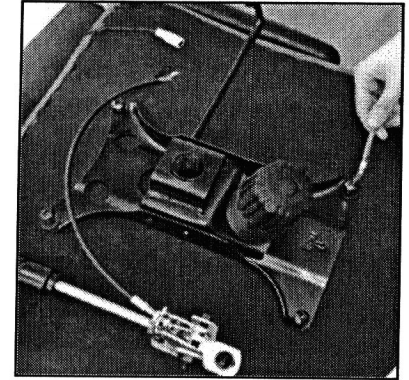

Step 10. (optional for massage model)

To connect the cables simply connect the two white cables together. Then connect the two thicker cables together. And at last connect the power cable to their respective connections.

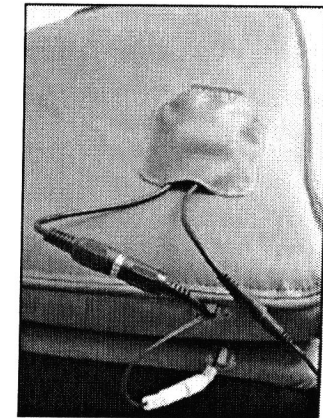

Step 11.

Finally turn the chair the right way up and slot the top of the chair into the piston on the base of the chair.

